



Streamliner DLX, Journey, Journey Spring, Transit, Phoenix, Phoenix DLX

MOUNTING INSTRUCTIONS

Before you start:

1- Packaging contents:

- 4mm Allen Bolts (4)
- Rack (Obviously without it, trying to mount it would be futile)

*If your rack is missing any hardware, please return the rack to your Axiom retailer for replacement.

2- Tools required:

- 4mm allen key
- 5mm allen key
- 10mm open ended wrench (For Transit Rack only)





Mounting instructions

A. Mount the Lower Part of the Rack

- 1- Make sure the rack is facing forwards: the end of the rack with the two arms is facing the front of your bike.
- 2- Align the holes at the bottom of the rack to the threaded eyelets on the rear wheel dropouts (A).*The rack should mount on the outside of the frame.
- 3- Use an allen bolt (B) on each side of the frame to attach the rack to the bicycle.
Loosely tighten the bolts so the rack can still move.







B. Mount the upper Part of the Rack

- 4- 3 Remove the bolts (D) located at the top of the seatstays, (C), from either side of the frame. *If there are no bolts, use two from the 4 included allen bolts. Make sure the threads in the frame are clean for easier installation.

- 5- Loosen, do not completely remove, the 4 bolts (E;F) at the front of the rack (Two on top and Two on the sides).

- 6- The Versalock arms (G) should now be mobile.
*Note: The transit rack has only two bolts and requires the use of a 8mm and a #2 Phillips screwdriver to loosen everybody

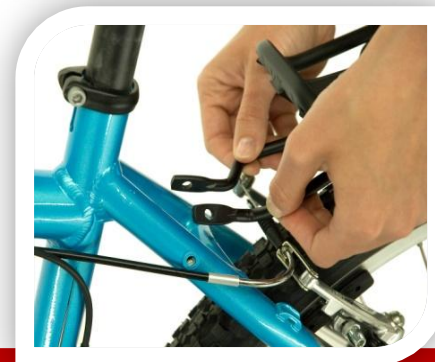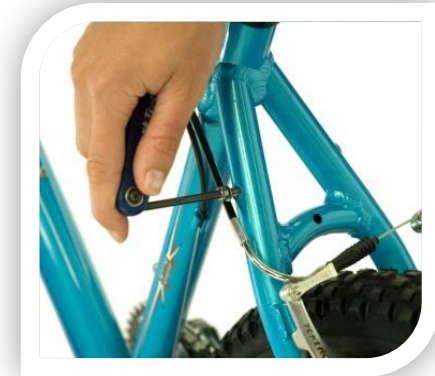





7- Extend the Versalock arms (G) forward to the seat stay

8- Using an allen bolt (I) on each side, loosely attach the arms (G) to each seatstay.

C. Position the Rack

9- To adjust the angle of the rack platform (J), slide the platform along the Versalock arms (G). Position the platform so is angled slightly forward, ensuring the platform does not lean to the rear.

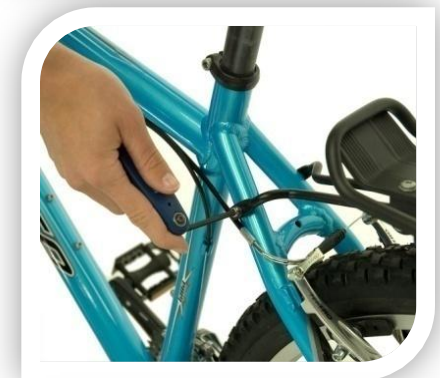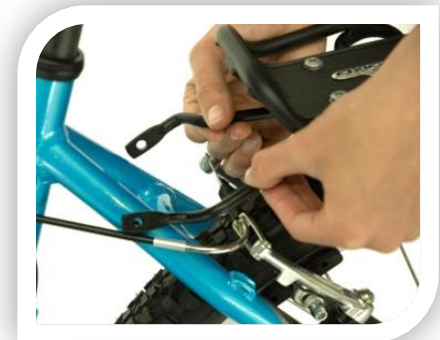



D. Tighten all the bolts add some panniers and go for a ride!

To secure the rack, tighten the bolts at top of the platform (E). Then tighten the bolts underneath the platform (F). *Note: The Transit rack has only two bolts located on the top of the platform.

10-Add panniers and go for a ride! Do it! Now, do it!

